

B4200/B4300 Printers

Image Drum Instructions


Image Drum Kit P/N 42102801

Side 1

Installing the New Image Drum




1. Turn the printer off and open the cover.

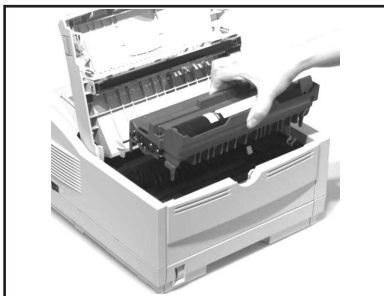

2. Lift out Image Drum/Toner cartridge and dispose of both in accordance with local regulations



3. Unwrap the new Image Drum cartridge and remove the protective sheet.

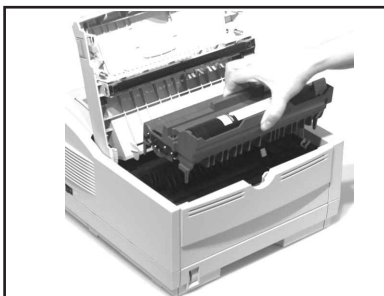


4. Place the alignment pins on each end of the Image Drum into the groove inside the printer and install the Image Drum. Remove the sponge and discard.

Installing the New Toner Cartridge



5. Pull the lock lever towards the front of printer until it stops. Lift the right end of the toner cartridge up and slide out of drum.

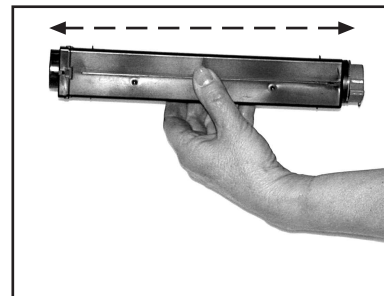

6. Unpack the toner cartridge and shake it from side to side to distribute toner.




7. Hold the cartridge in a horizontal position and remove the tape.



8. Hold the cartridge in the *vertical* position and lower the port end of the cartridge into the image drum.



9. Push the lock lever toward the back of the printer until it stops.

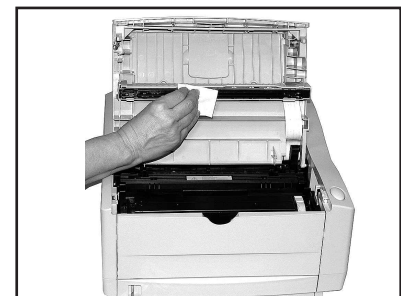

10. Use the LENS cleaner pad to wipe the corresponding LED array clean.



11. Close the cover and turn the printer back on.

See back of sheet for
Resetting The Drum Counter

OKI[®]

B4200/B4300 Printers

Image Drum Instructions

Side 2

Resetting The Drum Counter

After replacing the Image Drum, reset the drum counter to keep a correct count of the number of page printed on the Image Drum.

B4200

1. Start the Status Monitor for the printer.
2. Click on Printer Setup tab - Printer Menu button - Maintenance 1 tab.
3. Click the (Reset) button next to Drum Counter, then click on the (OK) button to reset the drum counter.

B4300

1. Press the **Online** button to return the printer to off line status.
2. Press the **Menu** button repeatedly until MAINTENANCE MENU is displayed, then press the **Select** button.
3. Press the **Item** button until **DRUM COUNT RESET** is displayed.
4. Press the **Select** button and Drum Counter is reset.